

ABURI MASTER KC-401WH

あぶ
炙りマスター
Petit

Easy to Refill from Canisters or
Lighter Gas
For Refined Decoration and
Meticulous Confectionery work



【Gas not included】

Igniting & Extinguishing
Flame by One-action

Holding the Flame for
Continued Work

Economical Gas Canisters or
Lighter Gas to Refill

Specifications

Dimensions : W90×L70×H146mm
Weight : 188g
Gas consumption : 0.28g/min
Gas filling amount : approx.7g
Calorific value : 0.23kW (200kcal/h)
Diameter of caliber : φ12mm
Flame temperature : from 800°C to 1300°C
Ignition type : Piezo Ignition

How to use



Airflow adjustment valve

Ignition button

Flame adjustment valve

Flame holding switch

allows you to use the
torch continuously.

Flame temperature and
flame shape can be
adjusted according to
the application
matter.

※Product image for illustration purposes only.



1

Fill the gas from the bottom
of the torch.



2

Set the Airflow adjustment valve and Flame
adjustment valve to the Positive(+) position.



3

Press the Ignition button to ignite.



4

Push up the Flame holding switch to hold
the flame.

WARNING

-Do not use the burner more than 3 minutes.
It causes burns and damages to the torch.